


IMPORTANT INSTRUCTIONS FLEXXOMAT T/TT



Before use read instruction manual carefully!

Flexxomat TT:
Max. Fill pressure 4 Bar!

Necessary free flat space for fluid distribution
R=200 mm

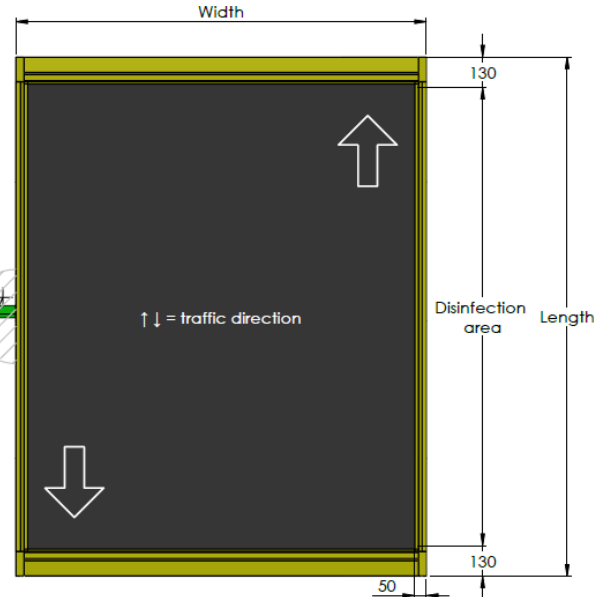

Driving directions are marked by the white arrows. Do not drive over the other sides!



Drive slowly passing the mat!



Always keep a straight line driving over the mat!




Before placing the mat remove sharp objects from the floor!



Do not use disinfectants containing chlorine or peracetic acid!



Always keep the mat filled, do not drive over a dry mat!

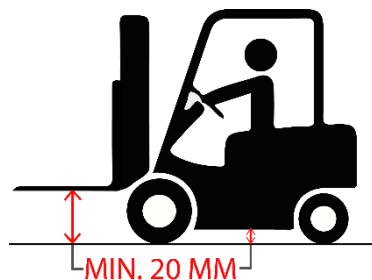

Keep a minimum ground clearance of 20 mm !
(pay attention to the forks of a forklift truck!)



Mat can be slippery!



Do not use high pressure water and abrasive brushes or brooms for cleaning purposes!